FIBER SENSORS

LASER SENSORS

PHOTOELECTRIC SENSORS

PHOTOELECTRIC SENSORS

AREA SENSORS

SAFFTY COMPONENTS

PRESSURE SENSORS

INDUCTIVE SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC CONTROL DEVICES

LASER MARKERS

Related Information


■ General terms and conditions.............. P.1

Compact Size Picking Sensor Anti-absentmindness

■ Glossary of terms......P.983~

■ Sensor selection guideP.11~/P.443~

■ General precautions......P.986~

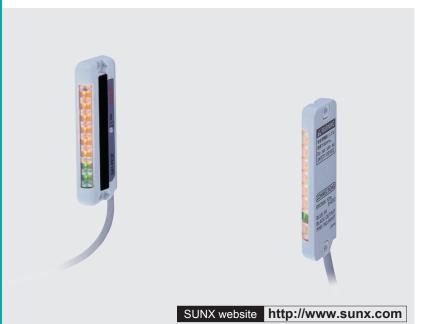







Make sure to use light curtains when using a sensing device for personnel protection. Refer to p.477~ for the light





Boasts a compact, pocket lighter size enabling universal installation

Space-saving, pocket lighter-sized unit

Ultra compact size: W24 × H70 × D8 mm W0.945 × $H2.756 \times D0.315$ in.

Can even be mounted within the small space constraints of parts containers.



NA1-PK3

Pocket lighter

Utilizes a large, bright, clearly visible job indicator

The ultra compact body incorporates a job indicator approx. 50 mm 1.969 in tall. Due to its brightness and high visibility, it is now possible to check sensor operation from a distance.



Selection Guide Slim Body NA2-N

Picking NA1-PK5 / NA1-5


> NA1-PK3 Other Products



APPLICATIONS

Cell production line



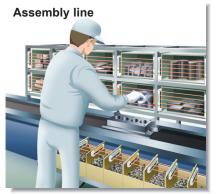



Never use this product in any personnel safety application.

BASIC PERFORMANCE

No synchronization wires required

Synchronization wires are not required, due to the utilization of a synchronized scanning system that results in a reduction of wiring man-hours. In addition, the sensors can be switched among three different emission frequencies, allowing up to three sets of sensors to be installed closely together in the same vertical plane, without causing mutual interference. Even when installed in multistage shelving, malfunctions due to mutual interference will not occur. (When mounted horizontally, a maximum of two sensor sets may be used side-by-side, without interference.)



FUNCTIONS

Switchable output operation

Output operation can be switched to suit the desired application.

OPTIONS

Sensor protection brackets are available

Sensor protection brackets are now available (optional), to protect sensors from damage due to tools and other objects. The protection brackets have a black coating, which enhances the visual effectiveness of the job indicator.



FIBER SENSORS

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

SAFETY COMPONENTS

PRESSURE SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC CONTROL DEVICES

LASER MARKERS

Selection Guide

Slim Body

NA2-N Picking

NA1-PK5

NA1-PK3

Other Products

MOUNTING

Easy alignment

The sensor's beam axis is directly in line with the mounting holes, making sensor alignment very easy. Mounting can be performed simply by using M4 nuts.



Flexible cable orientation

The cabling can be oriented in either of two different directions: down or to the side, thus permitting a flexible layout, in accordance with the sensor's mounting position.





FIBER SENSORS

LASER SENSORS PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS AREA SENSORS

SAFETY COMPONENTS

PRESSURE SENSORS INDUCTIVE PROXIMITY SENSORS PARTICULAR

USE SENSORS SENSOR OPTIONS


WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS

STATIC CONTROL DEVICES LASER MARKERS


Selection Guide Slim Body NA2-N

Picking
NA1-PK5 /
NA1-5
NA1-PK3
Other
Products

ORDER GUIDE

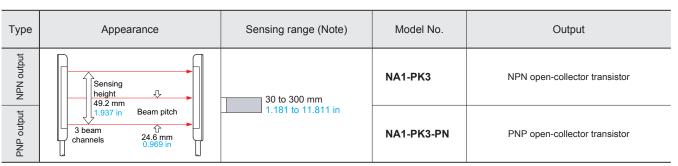

Notes: 1) The sensing range is the possible setting distance between the emitter and the receiver. The sensor can detect an object less than 30 mm 1.181 in away.

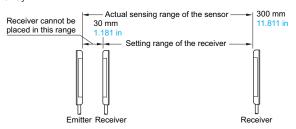

2) The model No. with suffix "P" shown on the label affixed to the product is the emitter, "D" shown on the label is the receiver. (e.g.) Emitter of NA1-PK3: NA1-PK3P, Receiver of NA1-PK3: NA1-PK3D

5 m 16.404 ft cable length type, pigtailed type

5 m 16.404 ft cable length type (standard: 2 m 6.562 ft) and pigtailed type (standard: cable type) are also available.


• Table of Model Nos.

Туре	Standard type	5 m 16.404 ft cable length type	Pigtailed type (Note)
NPN output NA1-PK3		NA1-PK3-C5	NA1-PK3-J
PNP output	NA1-PK3-PN	NA1-PK3-PN-C5	NA1-PK3-PN-J

Note: Please order the suitable mating cable separately for pigtailed type.

• Mating cable (2 cables are required.)

Model No.	Description	
CN-24-C2	4-core, cable length 2 m 6.562 ft	
CN-24-C5	N-24-C5 4-core, cable length 5 m 16.404 ft	

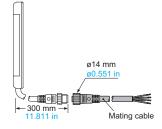

OPTIONS

Designation	Model No.	Description
Sensor protection bracket	MS-NA3-3	It protects the sensor body. Two black bracket set Four M4 (length 15 mm 0.591 in) screws with washers, and four nuts are attached.
Y-shaped connector	SL-WY 5 pcs. per set	This connector is able to combine the cables of receiver and emitter into one.

Sensor protection bracket


• MS-NA3-3

Two bracket set

(Four M4 (length 15 mm 0.591 in) screws with washers, and four nuts are attached.

Y-shaped connector

• SL-WY

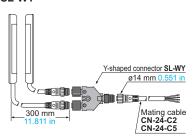




SPECIFICATIONS

		Туре	NPN output	PNP output	
Item		Model No.	NA1-PK3	NA1-PK3-PN	
Sens	sing height		49.2 mm	1.937 in	
Sens	sing range (N	ote 2)	30 to 300 mm 1.181 to 11.811 in		
Bear	n pitch		24.6 mm	0.969 in	
Num	ber of beam	channels	3 beam channels		
Sens	sing object		ø29 mm ø1.142 in or more opaque object (completely beam interrupted object)		
Supp	oly voltage		12 to 24 V DC ± 10 % Ripple P-P 10 % or less		
Curr	ent consumpt	tion	Emitter: 30 mA or less, Receiver: 50 mA or less		
Output			NPN open-collector transistor • Maximum sink current: 100 mA • Applied voltage: 30 V DC or less (between output and 0 V) • Residual voltage: 1 V or less (at 100 mA sink current) 0.4 V or less (at 16 mA sink current)	PNP open-collector transistor • Maximum source current: 100 mA • Applied voltage: 30 V DC or less (between output and +V) • Residual voltage: 1 V or less (at 100 mA source current) 0.4 V or less (at 16 mA source current)	
	Utilization ca	ategory	DC-12 c	or DC-13	
	Output opera	ation	ON or OFF when one or more beam channels are	e interrupted, selectable by operation mode switch	
	Short-circuit	protection	Incorp	porated	
Resp	oonse time		10 ms or less (when interference prev	vention function is used: 30 ms or less)	
ıs	Emitter		Power indicator: Green LED (lights up when the power is ON) Job indicator: Orange LED (lights up when the job indicator input is Low)	Power indicator: Green LED (lights up when the power is ON) Job indicator: Orange LED (lights up when the job indicator input is High)	
Indicators	Receiver		Operation indicator: Red LED (lights up when the output is ON) Stable incident beam indicator: Green LED (lights up when all beam channels are stably received) Job indicator: Orange LED (lights up when the job indicator input is Low)	Operation indicator: Red LED (lights up when the output is ON) Stable incident beam indicator: Green LED (lights up when all beam channels are stably received) Job indicator: Orange LED (lights up when the job indicator input is High)	
Interference prevention function		ntion function	Incorporated (Up to 3 units can be mounted close together.) (Note 3)		
	Pollution de	gree	3 (Industrial environment)		
	Protection		IP62 (IEC) (Refer to p.984 for details of standards.)		
nce	Ambient tem	perature	-10 to +55 °C +14 to +131 °F (No dew condensation or icing allowed), Storage: -20 to +70 °C -4 to +158 °F		
Environmental resistance	Ambient hur	nidity	35 to 85 % RH, Storage: 35 to 85 % RH		
alre	Ambient illur	minance	Incandescent light: 3,000 tx at the light-receiving face		
ment	EMC		EN 60947-5-2		
/iron	Voltage with	standability	1,000 V AC for one min. between all supply terminals connected together and enclosure		
En	Insulation re	sistance	20 $M\Omega$, or more, with 250 V DC megger between all supply terminals connected together and enclosure		
	Vibration res	sistance	10 to 150 Hz frequency, 0.75 mm 0.030 in (5 G max.) amplitude in X, Y and Z directions for two hours each		
	Shock resist	ance	500 m/s² acceleration (50 G approx.) in X, Y and Z directions for three times each		
Emitting element			Infrared LED (synchronized scanning system)		
Material			Enclosure: Heat-resistant ABS, Lens cover: Acrylic, Indicator cover: Acrylic		
Cabl	е		0.2 mm² 4-core (emitter: 3-core) oil resistant cabtyre cable, 2 m 6.562 ft long		
Cabl	e extension		Extension up to total 100 m 328.084 ft is possible for both emitter and receiver with 0.3 mm², or more, cable.		
Net weight			Emitter: 50 g approx., Receiver: 50 g approx.		

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +23 °C +73.4 °F.

 2) The sensing range is the possible setting distance between the emitter and the receiver. The sensor can detect an object less than 30 mm 1.181 in away.



3) For more details, refer to the "Interference prevention function" in "PRECAUTIONS FOR PROPER USE" (p.470).

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

SAFETY COMPONENTS

COMPONENTS

PRESSURE SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR

USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC CONTROL DEVICES

LASER MARKERS

Selection Guide Slim Body

NA2-N

Picking NA1-PK5 / NA1-5 NA1-PK3

Other Products

FIRER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

ARE SENSOR

SAFETY COMPONENTS

PRESSURF INDUCTIVE

SENSORS PARTICULAR SENSORS

SENSOR OPTIONS WIRE-SYSTEMS MEASURE-MENT SENSORS STATIC

DEVICES

LASER MARKERS

Selection Guide Body NA2-N

NA1-PK5/ NA1-5 NA1-PK3 Other Products

I/O CIRCUIT AND WIRING DIAGRAMS

NPN output type

I/O circuit diagram

Color code / Connector pin No. of the pigtailed type (Brown / 1) +V **M** D Load circuit Output (Note 1) 12 to 24 V DC ± 10 % 100 mA max Sensor (Blue / 3) 0 V (Pink / 2) Job indicator input Job indicator lighting circuit (Note 2)

Non-contact voltage or NPN opencollector transistor

 
Symbols...D : Reserve supply polarity protection diode

ZD: Surge absorption zener diode

Tr: NPN output transistor E: Job indicator (IND.)

Job indicator input Low (0 to 2 V): Lights up High (5 to 30 V, or open): Lights off

Connector pin position (Pigtailed type)



Notes: 1) No connection is required for the emitter.


2) The pin position for the SL-WY Y-shaped connector (optional) is identical to the receiver.

➤ Users' circuit Notes: 1) The emitter does not incorporate the output (black).

2) When the job indicator is used as a large size operation indicator, connect the job indicator input wire (pink) of the emitter and the receiver to the output wire (black) of the receiver.

PNP output type

I/O circuit diagram

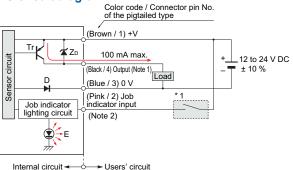

Notes: 1) The emitter does not incorporate the output (black).

Symbols...D : Reserve supply polarity protection diode ZD: Surge absorption zener diode Tr: PNP output transistor E: Job indicator (IND.)

Non-contact voltage or PNP opencollector transistor

Job indicator input High (4 to 30 V): Lights up Low (0 to 0.6 V, or open): Lights off

O Output (Note 1) Notes: 1) No connection is required for the emitter.

Connector pin position

(Pigtailed type)

Job indicator

input

2) When the job indicator is used as a large size operation indicator, connect the job indicator input wire (pink) of the emitter and the receiver to the output wire (black) of the receiver.


2) The pin position for the SL-WY Y-shaped connector (optional) is identical to the receiver

SENSING CHARACTERISTICS (TYPICAL)


Parallel deviation

Vertical direction




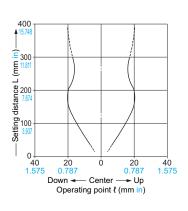


Horizontal direction Receive Emitter

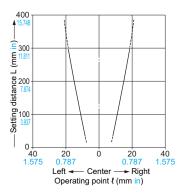


Angular deviation

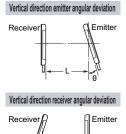

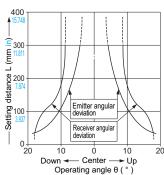

Horizontal direction emitter angular deviation Horizontal direction receiver angular deviation

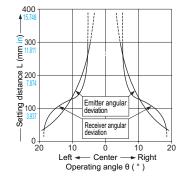



PRECAUTIONS FOR PROPER USE

Refer to p.986~ for general precautions.

· Never use this product as a sensing device for personnel protection.

· For sensing devices to be used as safety devices for press machines or for personnel protection, use products which meet standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.




- If this product is used as a sensing device for personnel protection, death or serious body injury could result.
- · For a product which meets safety standards, use the following products.

Type 4: **SF4B** series (p.481~)


Type 2: **SF2B** series (p.515~)

Part description

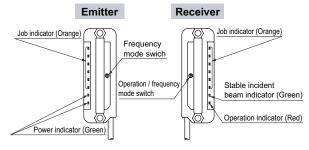

Mounting

• Use M4 screws with washers and M4 nuts. The tightening torque should be 0.5 N·m or less. (Please arrange the screws and nuts separately.)

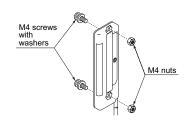

Selection of operation

• The output operation can be selected by the operation / frequency selection switch on the receiver.

Make sure that the power supply is off while setting the selection switch.


	State of operation / frequency selection switch	Output operation
r-on	FREQ. 3 2 FREQ. D-ON 1 L-ON	OFF when one or more beams are interrupted.
D-ON	FREQ. 3 FREQ. D-ON 1 L-ON	ON when one or more beams are interrupted.

Notes: 1) Selection of the output operation and the frequency for the receiver is carried out with the same switch. When the output operation is set, be sure to select the same frequency No. of the emitter and the

2) In case the operation / frequency selection switch is set to the position other than 1, 2 or 3, the state of the receiver is in D-ON / frequency 1.


Orientation

 • The emitter and the receiver must face each other correctly. If they are set upside down, the sensor does not work.




Interference prevention function

• By setting different emission frequencies, three units of NA1-PK3 can be mounted close together, as shown in the figure on the below.

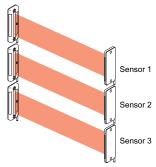

  However, if the sensors are mounted close together as shown in the figure below, up to 2 sets of sensors are possible.



Frequency setting

• Set the both emitting and receiving frequency of Sensor 1 to FREQ. 1, the both emitting and receiving frequency of Sensor 2 to FREQ. 2 and the both emitting and receiving frequency of Sensor 3 to FREQ. 3. Make sure that the power supply is off while setting the selection switch.

	(Selection Switch.			
			Emitter	Receiver
			Frequency selection switch	Operation / Frequency selection switch
Sensor 1	Canaca 1	L-ON	1 FREQ.	FREQ. 3 2 FREQ. D-ON 1 1 L-ON
	Selisul I	D-ON	1 FREQ.	FREQ. 3 2 FREQ. D-ON 1 1 L-ON
Se	Sensor 2	L-ON	1 FREQ.	FREQ. 3 2 FREQ. D-ON 1 1 L-ON
	Selisui 2	D-ON	1 FREQ.	FREQ. 3 2 FREQ. D-ON 1 1 L-ON
S	Sensor 3	NO-7	1 FREQ.	FREQ. 3 2 FREQ. D-ON 1 1 L-ON
	Sens01 3	D-ON	1 FREQ.	FREQ. 3 2 FREQ. D-ON 1 1 L-ON

Notes: 1) Take care that selection of the output operation and the frequency for the receiver is carried out with the same switch.

2) In case the frequency switch and the operation / frequency selection switch is set to the position other than 1, 2 or 3, the state of the emitter is in frequency 1 and that of the receiver is in D-ON / frequency 1.

FIRFR SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

SAFETY COMPONENTS

PRESSURE SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS MEASURE-

MENT SENSORS STATIC CONTROL DEVICES

LASER MARKERS

Selection Guide Slim Body

NA2-N

NA1-PK5 / NA1-5 NA1-PK3 Other Products



FIRER SENSORS

LASER SENSORS РНОТО-

SENSORS MICRO PHOTO-ELECTRIC SENSORS

ARE SENSOR SAFETY COMPONENTS

INDUCTIVE **SENSORS** PARTICULAR

PRESSURE

SENSORS SENSOR OPTIONS

WIRE-SYSTEMS MEASURE-MENT SENSORS

DEVICES LASER MARKERS

STATIC

Selection Guide Body NA2-N NA1-PK5/ NA1-5 NA1-PK3

Other

Products

PRECAUTIONS FOR PROPER USE

Refer to p.986~ for general precautions.

Wiring


- Make sure that the power supply is off while wiring and setting the selection switch.
- Take care that wrong wiring may damage the sensor.
- Verify that the supply voltage variation is within the rating.
- · If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- In case noise generating equipment (switching regulator. inverter motor, etc.) is used in the vicinity of the sensor, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- Extension up to total 100 m 328.084 ft is possible with 0.3 mm², or more, cable for both emitter and receiver. However, in order to reduce noise, make the wiring as short as possible.
- · Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.

- Make sure to use an isolation transformer for the DC power supply. If an auto-transformer (single winding transformer) is used, this product or the power supply may get damaged.
- In case a surge is generated in the used power supply, connect a surge absorber to the supply and absorb the surge.

Others


- Do not use during the initial transient time (0.5 sec.) after the power supply is switched on.
- Take care that the sensor is not directly exposed to fluorescent light from a rapid-starter lamp or a high frequency lighting device, as it may affect the sensing performance.
- · Avoid dust, dirt, and steam.
- Take care that the product does not come in direct contact with water, oil, grease or organic solvents, such as, thinner, etc.
- To select the switch, a minus screwdriver is necessary. (Tip dimension: $2.5 \times 0.6 \text{ mm } 0.098 \times 0.024 \text{ in}$)
- This sensor is suitable for indoor use only.

DIMENSIONS (Unit: mm in) The CAD data in the dimensions can be downloaded from the SUNX website: http://www.sunx.com

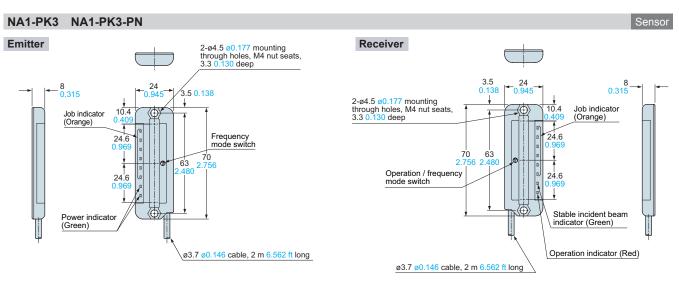

MS-NA3-3

Sensor protection bracket (Optional)

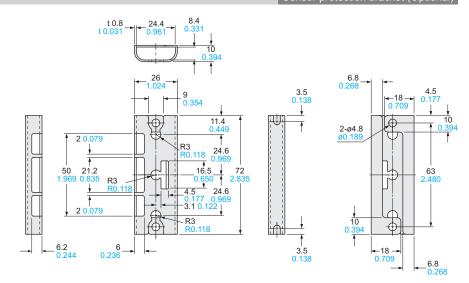

Material: Cold rolled carbon steel (SPCC) (Black chromate)

Two bracket set

Four M4 (length 15 mm 0.591 in) screws with washers and four nuts are attached.

Note: The sensor protection bracket can be used for both the emitter and the receiver.



MEMC

