

Operating Instructions DynaGear Gearboxes

1. General safety instructions

All works performed in connection with the transport, storage, installation / mounting, start-up, service and maintenance of the gearboxes must be performed by qualified specialists only and only with due regard to the following:

- the notes and instructions contained in present operating instructions;
- the indications on the type plate attached to the gearbox;
- the system specific instructions and requirements;
- the national / local safety regulations and the rules for the prevention of accidents.

Only operator's staffs is considered as being qualified who have the required professional qualifications and who are familiar with the execution of any of the above works.

Severe bodily injury and/or material damage may be caused by or result from:

- inappropriate use;
- wrong installation or operation;
- unauthorized removal of the required safety covers.

2. Specified application

DYNAGEAR gearboxes are special components and have been exclusively designed and constructed for the installation into machines and enable the deflection and multiplication of torques within a speed range up to $6\,000\text{ min}^{-1}$. They comply with the related machine (EN 292) and EMC directives (as far as applicable).

Any utilisation beyond that will be considered as not in accordance with the application the components have been specified and designed for. The manufacturer refuses to assume any liabilities resulting from any unauthorized use whatsoever. All risks must be born by the customer. As the DYNAGEAR gearboxes can be applied in the most different fields, the responsibility for any such specific application passes on to the customer at the time he puts them into service.

3. Transport / storage

The carrier in charge must immediately be notified of any transport damages probably detected after delivery. If need be, it must be made sure to prevent the gearboxes from being put into service. If necessary, sufficiently dimensioned transport means, e.g. rope guides, must be used.

DYNAGEAR gearboxes must only be stored in a dry, dust-free, low-vibration environment (damages caused to the bearings due to stop times) at temperatures from -25 up to $+50^\circ\text{ C}$.

4. Alterations and modifications

The DYNAGEAR gearboxes must not be changed, altered or modified in what way ever without our explicit permission, which particularly applies to their construction and to the safety requirements concerned. Any such unauthorized change, alteration or modification releases us from any liability whatsoever.

5. Installation / mounting

Upon installation, always make sure to take care of and comply with the following

- accommodate the devices on no other than on a regular, plane, vibration damped and torsion-free sub-construction. When doing so, always make sure to avoid that the boxes are put under tension. Both satisfactory lubrication and de-aeration are assured only if mounted in compliance with the gearboxes' constructional design.
- The drive and output elements (belt wheels, couplings, cardan shafts etc.):
 - must all have been balanced by applying a force equivalent to 6.3 G ;

- must be assembled using appropriate fitting and puller tools only;
- must be locked axially, even if shrunk on, and, when using appropriate tensioning elements, the prescribed tightening moments must be observed;
- must be provided with a safety cover to protect against accidental contact;
- if any, the correct belt tension has to be observed and the manufacturer's specifications referring thereto be followed;
- with any of the gearboxes, the admissible transverse forces must not be exceeded;
- if coupled directly, the orientation of the gearbox must be exact and conform to the manufacturer's specifications
- in case of both flange- and shaft-mounted gearboxes the assembly must be free from distortion
- make sure the gearboxes can run smoothly and are not subject to distortion.

6. First start-up

It is prohibited to start the DYNAGEAR gearboxes (start-up for the specified operation) until it has not been established that the related machine or system into which they are to be installed complies with the relevant EEC machine directive.

7. Operation

- Before first start-up, always check if all transmission elements have been assembled correctly.
- With standard gearboxes, the application of a venting or ventilation filter is not required.
- Do not put any control and/or protective equipment out of service, even if performing a test run.
- Make sure to perform all first test runs without load, take care of running noises and the development of heat.

During and after operation, always check if any of the gearbox surfaces are overheated.

When using mineral gear oils (CLP), the operating temperature should not exceed 90° C and if exceeding it nevertheless, this should only be temporarily. When using synthetic gear oils (CLP), an operating temperature of 130 °C is admissible only if using Viton sealing rings.

Should there occur any irregularities usually not noticed during normal operation, e.g. increased temperatures, sounds, vibrations, the gearbox must, in case of doubt, be taken out of operation to find the reasons for any such irregularity. If necessary, consult our service department.

8. Inspection and maintenance

As for-life lubrication, the DYNAGEAR gearboxes have been provided with high-quality synthetic oil (hydrocarbon plus additives) CLP in compliance with DIN 51 517, ISO VG class 150 (DIN 51 519) and are thus virtually free from maintenance.

The units operate close to their rated thermal limits for long periods, however, it is advisable to check the radial sealing rings for leaks at regular intervals, and to change the oil after approximately 15,000 operating hours. We have service instructions and lubricant recommendations available for you.

Wear part kits including replacement and repair instructions can be obtained from our service department.

August 2004

MS-GRAESSNER GmbH & Co. KG
THE GEAR COMPANY

Geschäftsführer:
Dipl.-Ing. Michael Stadler MBA

Komplementär:
Stadler Verwaltungs GmbH, Metzingen
HRB 361133 Stuttgart

D-72135 Dettenhausen
Kuchenäcker 11
Telefon +49 (0)7157 / 123-0
Telefax +49 (0)7157 / 123-212

e-mail: mail@graessner.de
www.graessner.de

Kreissparkasse Reutlingen (Metzingen)
BLZ 640 500 00
Konto-Nr. 100051344
SWIFT: SOLADES1REU
IBAN: DE91 6405 0000 0100 0513 44

Steuer-Nr. 86133 / 12450
USt-IdNr. DE268512068
HRA 724853

MANAGEMENTSYSTEM



DIN EN ISO 9001
DIN EN ISO 14001